
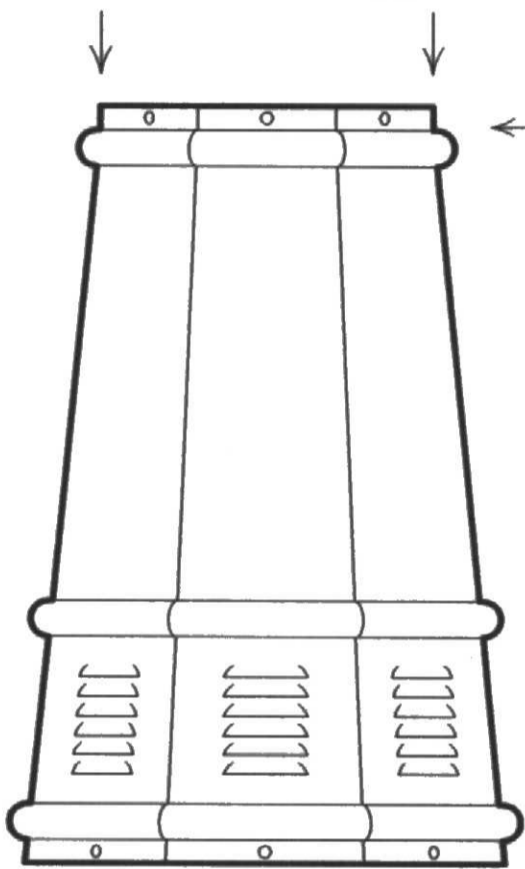


PLAN VIEW

CONTENTS:

- (1) CHIMNEY POT W/ DETACHED WEATHER SHIELD
- (8) BRASS SCREWS FOR SECURING WEATHER SHIELD
- (8) SLOTTED MOUNTING BRACKETS
- (8) NUTS
- (8) BOLTS
- (8) WASHERS

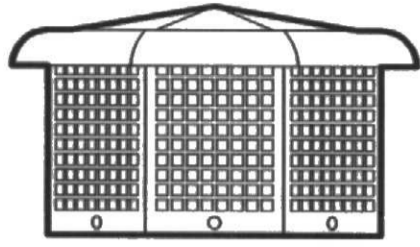


STEP #1:  
ATTACH WEATHER SHIELD W/ (8) BRASS SCREWS



STEP #2:  
ATTACH (8) MOUNTING BRACKETS TO CHIMNEY POT W/ CARRIAGE BOLTS / LOCK WASHERS / NUTS (DON'T OVER TIGHTEN TO ALLOW FOR LEVELING AT CHIMNEY TOP)

NOTE: MOUNTING BRACKETS SLIDE UP INSIDE CHIMNEY POTS THROUGH SLOTS ALONG BOTTOM EDGE OF CHIMNEY POT. INSERT CARRIAGE BOLTS FROM INSIDE (NUT & WASHER WILL BE ON THE OUTSIDE)

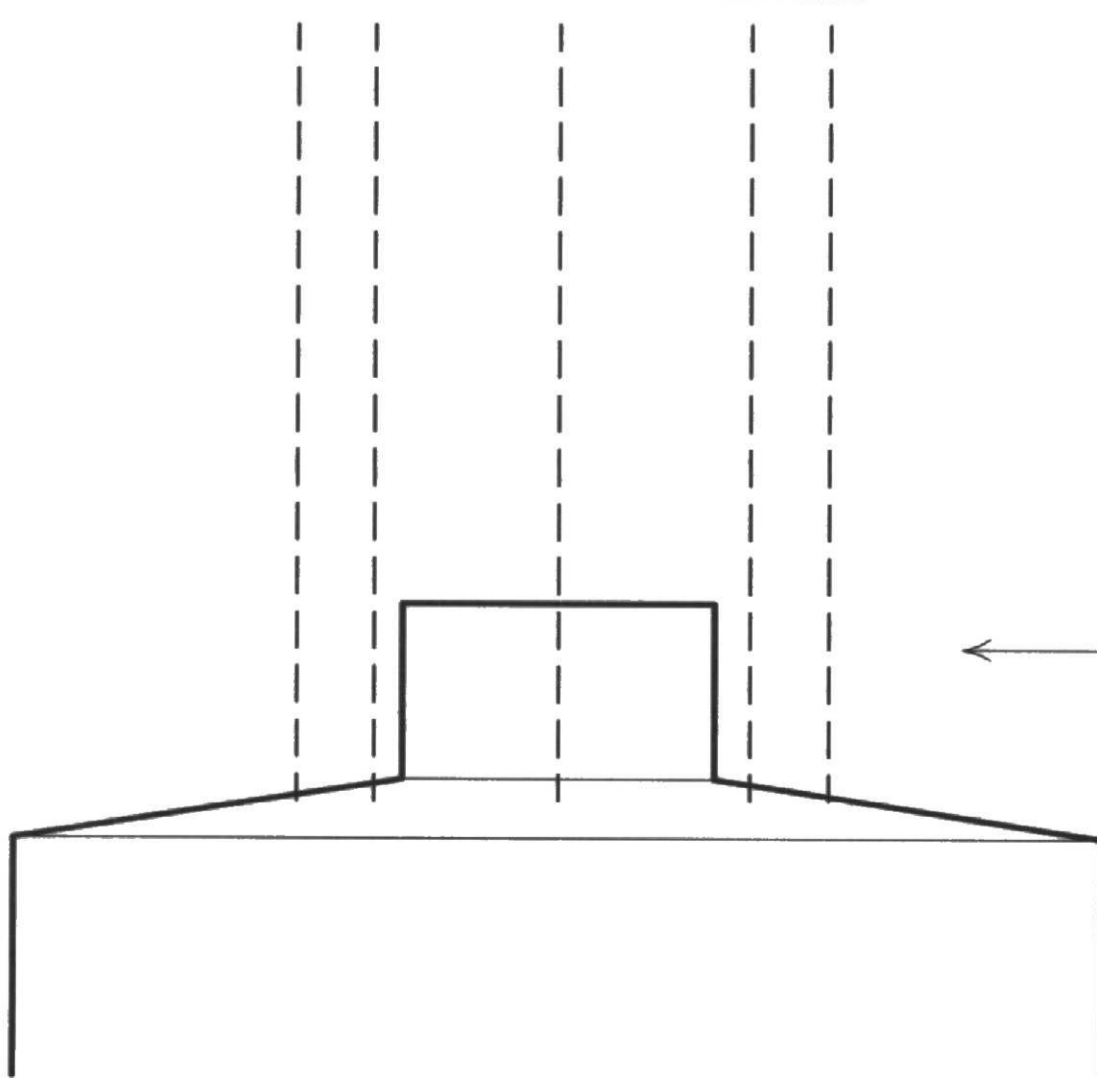

STEP #3:  
SET ASSEMBLED CHIMNEY POT DOWN OVER FLUE ONTO CHIMNEY. POT SHOULD BE CENTERED OVER FLUE. USING THE ADJUSTABLE BRACKETS THAT ARE ATTACHED TO THE CHIMNEY POT, SET POT PLUMB AND LEVEL. TIGHTEN NUTS TO SECURE ADJUSTABLE BRACKETS IN PLACE. MARK HOLES IN BRACKETS FOR ATTACHING POT TO CHIMNEY, REMOVE POT AND DRILL HOLES INTO CHIMNEY. (USE PROPER ANCHORS FOR MOUNTING TO CHIMNEY, MASONRY OR SHEET METAL OVER WOOD BASE). SET CHIMNEY POT ON CHIMNEY AND SECURE IN PLACE.

INSTALLATION INSTRUCTIONS

CAUTION: EDGES OF CHIMNEY POT ARE SHARP. USE GLOVES DURING INSTALLATION.